



Multi-Shot .177 Magazine System[®] for the Air Arms S400 Rifle.

Thank you for your purchase. Please read these fitting instructions before attempting to install the magazine system.

Your kit should contain -

- 1 off Magazine
- 1 off Bracket
- 1 off Pellet tray
- 1 off 3mm allen key
- 1 off Spare self-adhesive strip

Safety first.

Observe safe practices when handling your rifle and follow the manufacturer's safety instructions when doing so. Check the rifle is not loaded and is de-cocked when setting up the magazine on your rifle. The magazine and bracket contain strong magnets. Do not place them near magnetic media such as credit cards & floppy discs or any other magnetically sensitive devices. People with

pacemakers should seek medical advice before using this product.

Installation.

1. It may be necessary to move your front scope mount forward on the dovetail rail to accommodate the magazine bracket.

2. Carefully slide the magazine bracket on to the dovetail rail. Do not tighten the Allen screw yet.

3. Slide in the magazine from the left hand side of the rifle. (Or the right side for left hand model) It will be necessary to pull back the bolt, but not so far as to 'cock' the gun.

4. Adjust the position of the bracket on the dovetail so that it does not cause the magazine to bind when inserting / removing

5. Gently tighten the allen cap screw sufficient only to secure the bracket. Damage to the bracket or your rifle will result if too much force is applied.

www.rowanengineering.com

6. The following step is optional, but will greatly improve the ease of which pellets will slide in to the breech when using the rifle 'single-shot' and 'multi-shot' and is recommended.

Thoroughly de-grease the pellet loading groove in front of the breech with a tissue / cotton bud and a small amount of de-greaser / solvent.

You will find a small piece of 'blue-tac' stuck in the centre of the tray. Use an allen key or match stick stuck in to the 'blue-tac' to assist picking up and positioning the tray. See photo #1

Take your time with this step.

Try a practice run with the paper backing still attached. When ready, remove the protective paper from the adhesive backed pellet tray.

Cock the rifle – take extra care here, ensuring the safety catch is on, if fitted.

Carefully align the tray with the groove and press it firmly in to position as shown in photo #1, making sure the tray does not protrude above the side of the pellet groove. See photo #2.

Remove the 'blue-tac' when finished.

The self-adhesive is a temporary measure for testing and setting up. For a permanent fitting which is advised, the self-adhesive can be removed and the tray fitted with a small dab of epoxy or superglue. Note If your rifle is under 12 months old this may invalidate your warranty.

7. Take your rifle to a safe area for test shooting.

8. Take the magazine and load it with suitable pellets – Air Arms Fields are a good choice. See photo #3

Continue until 8 slots are loaded. Leave the last slot empty. See photo #4

9. Withdraw the bolt and slide the magazine in to position. The magnet will click and hold it in place.

10. Pull the cocking bolt fully back.

11. With the thumb, index the magazine and allow a pellet to drop on to the pellet tray.

12. Push the bolt forward and lock in to position.

13. Congratulations you now have a S400 multi-shot rifle ready to fire.

www.rowanengineering.com

Photo 1

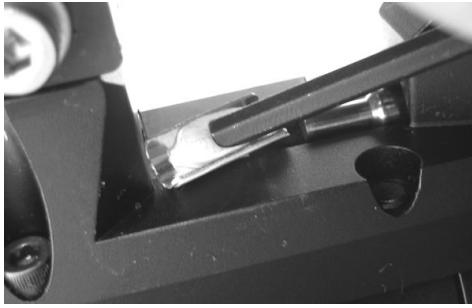


Photo 3

Load pellet via
bottom slot as
shown.

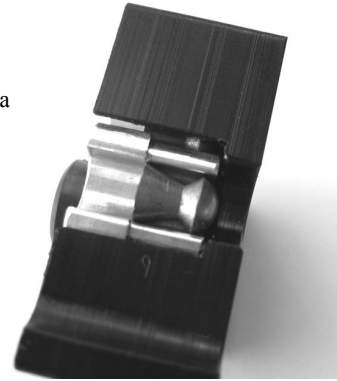


Photo 2



Photo 4



www.rowanengineering.com